

驅動細分表

控制板細分跳線帽由左到右分別是M1、M2、M3，其中跳線帽插上為High，跳線帽去掉為Low

A4988 驅動細分表				DRV8825 驅動細分表				LV8729 驅動細分表				TMC2100 驅動細分
M1	M2	M3	細分	M1	M2	M3	細分	M1	M2	M3	細分	
Low	Low	Low	Full Step	Low	Low	Low	Full Step	Low	Low	Low	Full Step	差分算法將16細分擴展到256細分， 步進值按照16細分計算，可通過插 上MKS CD來外接大驅動
High	Low	Low	1/2 Step	High	Low	Low	1/2 Step	High	Low	Low	1/2 Step	
Low	High	Low	1/4 Step	Low	High	Low	1/4 Step	Low	High	Low	1/4 Step	
High	High	Low	1/8 Step	High	High	Low	1/8 Step	High	High	Low	1/8 Step	
High	High	High	1/16 Step	Low	Low	High	1/16 Step	Low	Low	High	1/16 Step	
				High	Low	High	1/32 Step	High	Low	High	1/32 Step	
				Low	High	High	1/32 Step	Low	High	High	1/64 Step	
				High	High	High	1/32 Step	High	High	High	1/128 Step	